

 
HUNTER - AMARYLLIS - CEILING FAN ACCESSORIES GUIDE

Preparing the Remote

The remote control is already paired for use. For your convenience, a remote function card is packed in with your remote.


NOTICE

- Always purchase the correct size and grade of battery most suitable for the intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from equipment which is not to be used for an extended period of time.
- Remove used batteries promptly.

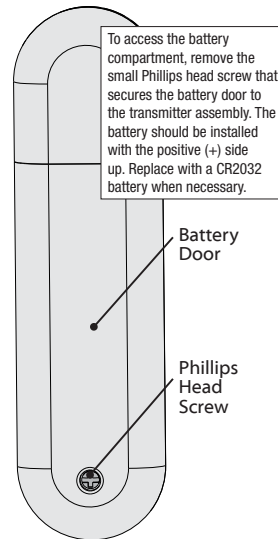

Remote Function Guide




Key Press	Function
+ Quick Press	Light On/Off
+ Long Press	Light Dimming
+ Quick Press	Fan On/Off
+ Quick Press	Raise Fan Speed
+ Quick Press	Lower Fan Speed
Long Press	Fan High
Long Press	Fan Low
Long Press +	Dimming Mode On/Off

 


Installing the Remote Control Cradle

You have two options for installing the remote cradle. Choose which path works best for you.

   Option 1: Using Adhesive Strip

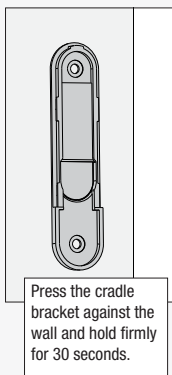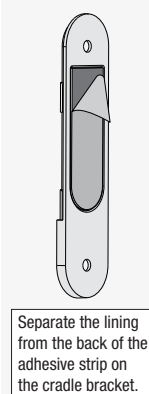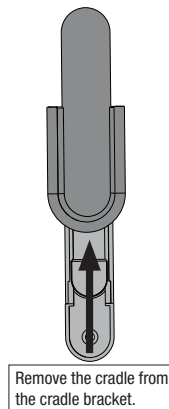

Option 2: Using Screws

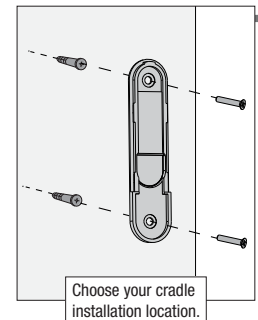 

If you are installing into drywall, drill two 9/64 width holes using the cradle bracket as a guide. Gently hammer the included drywall anchors into the pre-drilled holes.

