




HUNTER - HAVOC - CEILING FAN ACCESSORIES GUIDE

Preparing the Wall Control


- Turning off the power**
Ensure the power is OFF at the outlet box and wall switch location before proceeding with installation.




- Installing the battery**
To access the battery compartment, slide the battery door up.
Replace the used battery with two AAA batteries when needed.

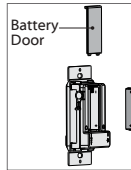


- Wiring the Wall Control**
Connect the grounding wire from the wall control to the ground control from the switch box using the provided wire nuts.
Connect the "LIVE IN" from the switch box to the "~VAC" from the wall control using the provided wire nuts.
Connect the "LIVE OUT" from the switch box to the "FAN" out from the wall control using the provided wire nuts.
Push all wires into the switch box.

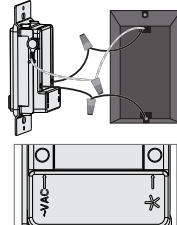


- Installing the Wall Control**
Install the longer screws through the slots in the wall control into the switch box screw holes.

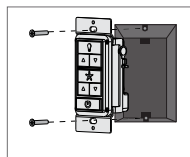

- Installing the Wall Plate**
Install the shorter screws through the wall control plate and into the screw holes in the wall control.

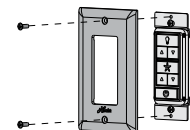

- Turning on the power**

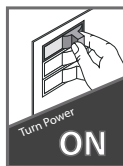

KEY PRESS	FUNCTION
LIGHT FUNCTIONS	
	Light On/Off
	Light Dimming Control
Long Press	Light High
Long Press	Light Low
Long Press +	Dimming Mode On/Off
FAN FUNCTIONS	
	Fan On/Off
	Fan Speed Control
Long Press	Fan High
Long Press	Fan Low
	Power On/Off
Long Press +	Pair Function

- The remote transmitter is already paired to the receiver and ready to use. If you need to pair your remote, cycle power to the fan by turning power off and back on at the wall switch (or circuit breaker if necessary). Within three minutes, do the following:



- Reference the included remote function card for information on how to use your wall control!