 




HUNTER - SYMPHONY - CEILING FAN ACCESSORIES GUIDE


Remote Controlwww.HunterFan.com 1.888.830.1326

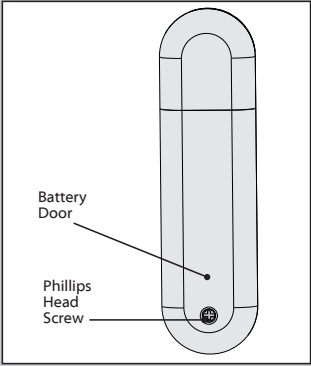


Battery Door

Phillips Head Screw

To access the battery compartment, remove the small Phillips head screw that secures the battery door to the transmitter assembly. The battery should be installed with the positive (+) side up. Replace with a CR2032 battery when necessary.

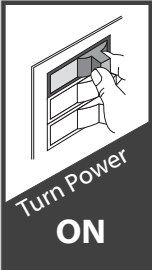

Turn Power
ON

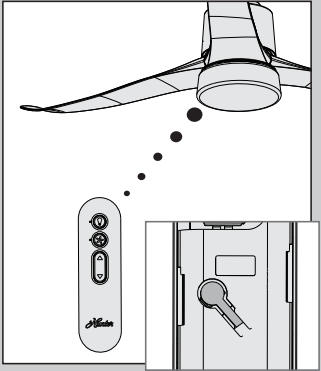

The remote transmitter is already paired to the receiver and ready to use.

Note: If your need to pair your remote, remove the battery door. Cycle power to the fan by turning power off and back on at the wall switch (or circuit breaker if necessary). Within three minutes, press the pair button on the remote. If pairing was successful, a single beep will sound. If three beeps sound, the remote was unpaired. Re-pair using the steps above.

To prevent faulty operation, please disconnect power from all other ceiling fans within range while pairing.

15

M3602-01 • 09/01/16 • © 2016 Hunter Fan Company



#2 Chootoo Road, South Aranguez, San Juan, Trinidad






HUNTER - SYMPHONY - CEILING FAN ACCESSORIES GUIDE

Remote Control Cradle www.HunterFan.com 1.888.830.1326

You have two options to install the included remote control cradle to the wall. Choose which path works best for you.

 Option 1: Using Screws

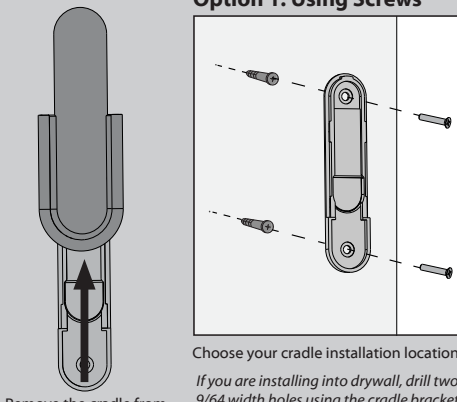


Remove the cradle from the cradle bracket.

Choose your cradle installation location.

If you are installing into drywall, drill two 9/64 width holes using the cradle bracket as a guide. Gently hammer the included drywall anchors into the pre-drilled holes.

Install the cradle bracket to the wall with the included screws.

Option 2: Using Adhesive Strip

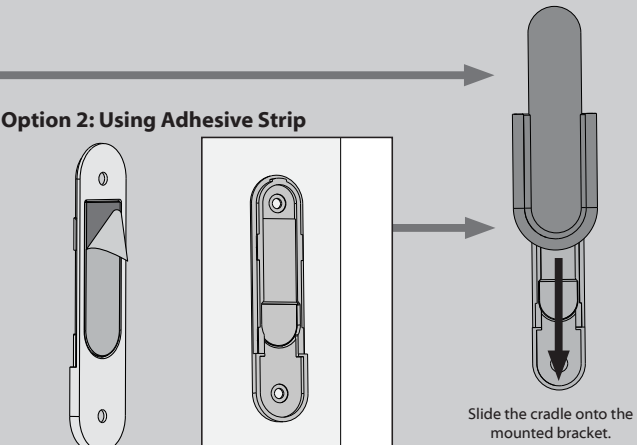

Apply the adhesive sticker to the back of cradle bracket per the instructions on the adhesive sticker.

Press the cradle bracket against the wall and hold firmly for 30 seconds.

Slide the cradle onto the mounted bracket.

16

M3602-01 • 09/01/16 • © 2016 Hunter Fan Company



#2 Chootoo Road, South Aranguez, San Juan, Trinidad

