

5 YEAR LIMITED WARRANTY

"Thank you" for purchasing our product. It is our policy to furnish you with high quality products at a fair price. With proper installation your fan should provide you with years of money saving comfort.


This fan is guaranteed to be free from defects in workmanship and Material for a period of five (5) years from date of purchase. Within the first (1) year from date of purchase any defective product should be returned to your **RETAIL** OUTLET along with proof of purchase. For the balance of the warranty, four (4) years, the **MOTOR WINDINGS ONLY** shall be free of defects. We will correct such defects or replace the motor assembly at our option if the product is returned, **FREIGHT PREPAID**, to us. The returned fan must be accompanied by your proof of purchase and a cheque for \$20.00 for handling and labour charges. All costs of removing and re-installing the product are **YOUR RESPONSIBILITY** damage to any part as such by accident, misuse, improper installation or by affixing any accessive **IS NOT** covered by this warranty. As a result of varying climatic conditions in our area this warranty does not cover any changes in finishes, including rusting, pitting, corroding, tarnishing or peeling. **WARRANTY VOID**: In cases of alteration, abuse, installation not in accordance with instructions or **REMOVAL of the CSA Sticker**. 11/16



NEED HELP? Call or Email us first

CF-10A 11/20

> Our service team is ready to answer your questions... Monday – Friday 1-800-265-1833 (English) / 1-800-567-2513 (French) 8 w-5 messt IN CANADA - ressalescanada@canarmna.ca - IN USA - ressalesusa@canarmna.ca

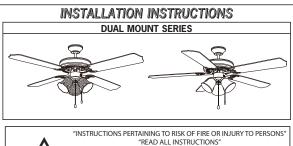



Blade Screw Driver - Wire Cutters Wiring supplies as required by electrical code.

NOTE: FOR OPTIMUM QUIETNESS, FULLY ASSEMBLE FAN AND RUN 24 HOURS

2157 Parkedale Ave., Brockville, Ontario K6V 5V6 PH: (613) 342-5424 FX: (613) 342-8437 2555 Rue Bernard Lefebvre Laval, Quebec H7C 0A5 PH: (450) 665-2535 FX: (450) 665-0910







SAFETY PRECAUTIONS

- 1. Turn off power at main electrical service box before starting installation
- Electrical connections must comply with local code ordinances, national electrical codes, CEC, NEC and ANSI/NFPA 70.
- codes, CEC, NEC and ANSI/NFPA 70. 3. Make sure the installation site you choose allows the fan blades to rotate freely
- without any obstructions. 4. When mounting the fan on a ceiling outlet box, Use an approved (CSA for Canada and UL for U.S.) ceiling fan box marked **'FOR FAN SUPPORT'**. Ensure the outlet box is
- UL for U.S.) ceiling fan box marked **'FOR FAN SUPPORT**'. Ensure the outlet box is securely installed in place such that it is able to support at least the fan weight.
- 5. WARNING: To reduce the risk of fire, electric shock, or other personal injury, mount fan only on an outlet box or supporting system marked acceptable for fan support of 35 lbs (15.9 kg) or less and use the mounting screws provided with the outlet box. Most outlet boxes commonly used for the support of lighting fixtures are not acceptable for fan support and may need to be replaced. Consult a qualified electrician if in doubt.
- Total Fan Weight For Reference: 42"approximate 7.5 kgs(16.53lbs), 52"approximate 9.0 kgs(19.84lbs).

WARNING

 To reduce the risk of fire or electrical shock, ONLY use model CQ005 remote control for optional remote control adaptability.
 WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL

INJURY, MOUNT TO OUTLET BOX MARKED ACCEPTABLE FOR FAN SUPPORT AND USE MOUNTING SCREWS PROVIDED WITH THE OUTLET BOX.

Mount with the lowest moving parts at least 2.10 Meters (7 Feet) above floor or grade level.
DO NOT operate reversing switch while fan blades are in motion. Fan must

be turned off and rotating blades stopped, reverse chain pulled, the speed chain pulled again to start in the opposite direction.

INSTRUCTIONS

A ceilling fan has a completeky internal switchung system for total operation by way of pull chains. On a fan/light combination, three pull chains will exist: One for light, on and off. The second is for fan speeds. This will be marked (SPEED) on the fan switch housing.

. 1st Pull will give fan High Speed 2nd Pull will give fan Medium Speed 3rd Pull will give fan Low Speed 4th Pull will Shut Fan Off

4th Pull will Shut Fan Off The third pull chain is for Forward/Reverse#(**Note: Some models come with a slide switch instead of a pull chain**). This setting would usually be changed twice per year. Downdraft in summer to create a wind chill to give a cooling effect. Updraft in winter to circulate the hot stratified air off the ceilling and back down to the floor without creating a wind chill.

Pg. #2

Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

Unique Identifier: CANARMNA Responsible Party

CanarmInc.

808 Commerce Park Drive, Ogdensburg, New York, USA 13669 1-800-267-4427

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

Pg. #13







2.

3.

4. 5.

6.

7.

10.

11. 12.

13.

14

15. 16.

17

18.

19.

20

21.

22

23. 24.

25

26.

27.

28.

29

30.

31

32

TROUBLE

1. Fan will not start

2. Fan sounds noisy

Check wiring connections to fan. Check fuses and circuit breakers.
 Check wiring connections in switch housing.
 CAUTION: Turn power off for last two items.


SUGGESTIONS

TROUBLESHOOTING

- Check to make sure that all screws in motor housing are snug.
 Check to make sure that blade bracket screws are tight. Check to make sure that marrettes in switch housing are not ratiling against wall of switch housing. If fan has a light kit make sure switch housing screws and set screws are tight.

 - Some fan motors are sensitive to signals from solid state variable controls. If solid state controller is used, change to an alternative control. (See a representative for a list of available controls.) - Allow a 24 hour break in period to eliminate most noises.
 - Check that all blades are screwed firmly into blade brackets.
- 3. Fan wobbles or shakes excessively
 - Check that blade brackets are secured firmly to motor. Check distance from tip of blades to ceiling. Check distance between blade tip to blade tip. All
 - measurements should be equal. Loosen blade screws and position blade until even then re-tighten.
 - Check that the downrod hemisphere notch is engaged in canopy. Check to make sure that jam screws in downrod are tightened. Make sure canopy and mounting bracket are tightened securely to wooden joist.
 - Make sure warpage has not occurred in wooden blades. If so, contact the customer service
 - department for replacement parts.

ASSEMBLY DRAWING

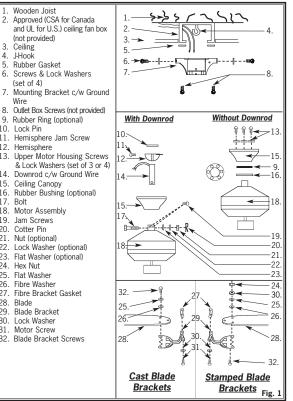

Pg. #12

Pg. #3





 
INSTALLATION

NOTE: All set screws must be checked and retightened where necessary, before and after installation.

MOUNTING OPTION

DOWNROD MOUNT


- Using a Philips screwdriver loosen the two upper jam screws on the yoke. Position downrod inside canopy.
- Route wires exiting yoke on motor through ceiling canopy and downrod. Position downrod/canopy into yoke and align holes in yoke and downrod.
- Insert bolt through hole in yoke and downrod. "Be careful not to damage or cut the fan wires." Tighten flat washer, lock washer, and nut and bolt (not included on some
- models). Secure with cotter pin through hole in the end of the bolt. Secure downrod in position by tightening upper jam screws



FLUSH MOUNT

Optional for some models -Remove rubber ring from canopy (see fig. 2d) Remove the voke screws and lockwashers which correspond to the holes in the canopy.

 Position canopy over the holes on motor and secure with the same screws and lockwashers removed in the previous step. Ensure to place the rubber bushing between the canopy and motor.



Pg. #4

DETACHABLE LIGHT KITS

ed or Blue

Wires

Black or

lue Wire


Nuts

Fig. 10k

Bulh

Remove 2 clips (optional) and nuts. Loosen third clip (optional) and nut. Place proper bulb type and wattage into the fixture.

- Loosen thumb screws on light. Place shade on light and secure with thumb screws, finger tight. Connect tassels to switches feeding

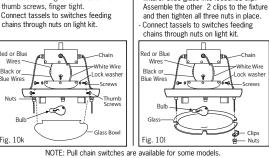

B PERMANENTLY ATTACHED LIGHT Loosen thumb screws on light. Install proper wattage and type of bulb identified on light or shade Place shade on light and secure with thumb screws, finger tight.



Clips

Nuts

- Align slots in glass bowl with nipples on fixture. Slide glass into loosened clip.

NOTE: Electrical diagrams are for reference only. Light kits that are not packed with the fan must be CSA/UL Listed and marked approval for use with the model fan you are installing. Switches must be CSA/UL General Use witches. Refer to the instructions packaged with the light kits and switches for proper assembly

WARNING: Check all connections, set screws and screws a resecu rely tightened before the next step.

To clean the fixture, turn off the power, wait for it to cool, and wipe the fixture with a clean. soft cloth.

Pg. #11






Voke Screws & Washers

-Rubber Bushing

Canopy

Moto Fig. 2f




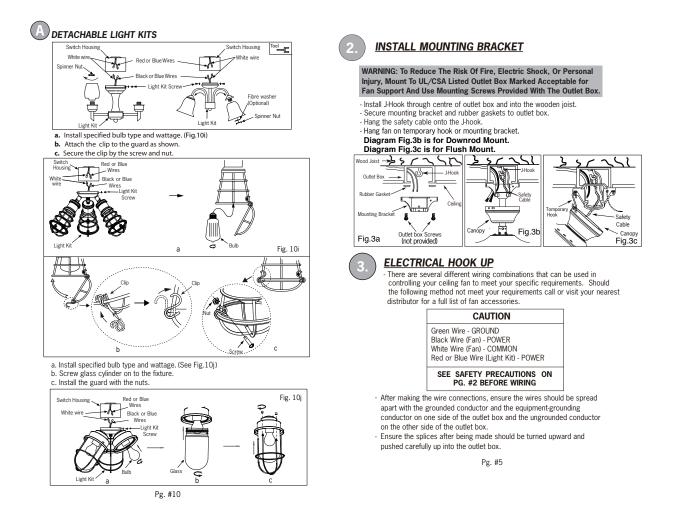







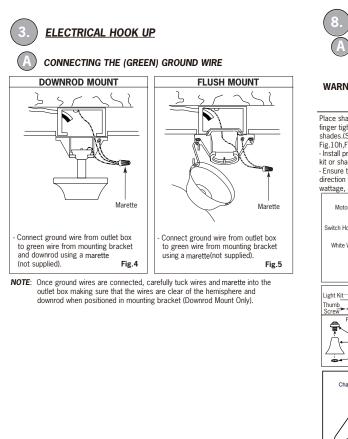



LIGHT KITS (Optional in some fans)

DETACHABLE LIGHT KITS (Refer to one of the following light kits for your model)


Remove light kit screws and washers. Connect polarized connectors of light kit to corresponding connectors found in switch housing.

WARNING: BE SURE TO TURN OFF POWER BEFORE INSTALLING - Carefully tuck electrical wires back into switch housing, align light kit with switch housing and secure with three light kit screws and washers.


Place shades on light kit and secure with either screws, finger tight, spinner nut or push and turn for pop-off style shades.(See Fig.10a,Fig.10b,Fig.10c,Fig.10d,Fig.10e, Fig.10h,Fig.10i,Fig.10j).

Install proper wattage and type of bulb identified on light kit or shade.

- Ensure that bulb sockets are attached in a parallel direction to the hanging chains. Install proper bulb type wattage, ensuring that pull chains do not rest on bulbs.

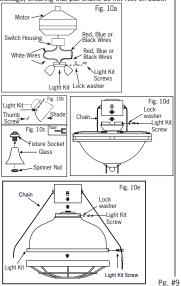

- Install proper wattage and type of bub identified on light housing or shade. Place glass on light housing and secure (See Fig. 10f, Fig.10g).

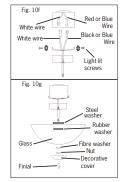

Pg. #6







 
MOUNT BLADE BRACKETS TO BLADES

Cast Blade Brackets

- Take out hardware package. - Place blade bracket screw through flat
- Align with corresponding hole in
- blade bracket.
- Repeat with (2) remaining screws and tighten.


Stamped Blade Brackets

- Take out hardware package.
 Place blade bracket screw through hole in blade bracket.
- Align with corresponding hole in blade bracket.
- Place fibre washer and flat washer over blade bracket screw and secure with hex nut.
 Repeat with (2) remaining screws and



MOUNTING BLADES TO MOTOR

 Take out hardware containing motor screws, lock washers and gaskets. Place lock washers over motor screws, position motor screws in blade brackets, place fibre bracket gaskets over screws and secure to motor. Make sure all screws are tightened securely.




NOTE: Fan comes with three rubber stops (optional on some models) on motor for shipping purposes only. Remove stops before running motor or installing blades to motor.

Pg. #8

ELECTRICAL HOOK UP (Continued)

 CONNECTING BLACK, WHITE, AND (RED OR BLUE) WIRES



- Connect white wire from outlet box to white wire from fan using marret (not supplied).

Connect black wire from outlet box to black wire from fan plus (red or blue wire) using a marret.

NOTE: A red or blue wire would be power for a light kit if applicable.

NOTE: Once wires are connected, carefully tuck wires and marrettes into the outlet box making sure that the wires are clear of the hemisphere and downrod when positioned in mounting bracket

(Downrod Mount Only). MOUNTING FAN ASSEMBLY

Place two screws and washers on mounting plate (marked B on diagram) which correspond with slots in canopy. Screw in two turns. Position canopy to mounting plate aligning slots to screws (marked B on

 
 Position canopy to mounting plate aligning slots to screws (marked B on diagram) then turn to lock.
 Position and tighten the two screws and washers (marked A on diagram)

then tighten the two screws (marked B on diagram).

ENGAGE HEMISPHERE (Downrod Mount Only)

Carefully rotate fan assembly until groove in hemisphere locks over tab of canopy assembly.

WARNING: Failure to seat tab in groove could cause damage to electrical wires and possible shock or fire hazard.



NOTE: When installing fan on sloped ceiling, make sure tab on hanger bracket faces towards the top of the slope. Depending on the slope, a longer downrod may be required to prevent fan blades from hitting the ceiling.

Pg. #7



