

# HUNTER - LOW PROFILE III- CEILING FAN MAINTENANCE GUIDE

Maintenance, Operation & Cleaning www.HunterFan.com 1.888.830.1326

**Turn Power  
ON**

**Changing the bulbs** - Unscrew the finial and remove it from the threaded rod. Remove the finial cap and unscrew the globe keeper while supporting the globe with your other hand. Carefully remove the globe. Unscrew bulbs and replace with bulbs of same type and wattage. Reinstall the globe assembly.

**Changing the direction of air flow** - Move the reverse switch to the opposite position.

**Cleaning the fan** - Use soft brushes or cloths to prevent scratching. Cleaning products may damage the finishes.

13

M0024-01 • 02/08/16 • © Hunter Fan Company

For questions regarding removing a light kit, call customer service 1-888-830-1326.



# HUNTER - LOW PROFILE III- CEILING FAN MAINTENANCE GUIDE

**Troubleshooting** www.HunterFan.com 1.888.830.1326

<p><b>Fan doesn't work</b></p> <ul style="list-style-type: none"><li>• Make sure power switch is on.</li><li>• Pull the pull chain to make sure it is on.</li><li>• Push the motor reversing switch firmly left or right to ensure that it is engaged.</li><li>• Check the circuit breaker to ensure the power is turned on.</li><li>• Make sure the blades spin freely.</li><li>• Turn off power from the circuit breaker, then loosen the canopy and check all the connections according to the wiring diagram on page 7.</li><li>• Check the plug connection in the switch housing.</li></ul>	<p><b>Excessive wobbling</b></p> <ul style="list-style-type: none"><li>• Tighten all of the blade and blade iron screws until they are snug.</li><li>• Use the provided balancing kit and instructions to balance the fan.</li></ul>	<p><b>Noisy Operation</b></p> <ul style="list-style-type: none"><li>• Tighten the blade and blade iron screws until they are snug.</li><li>• Check to see if any of the blades are cracked. If so, replace all of the blades.</li></ul>
--	--	---

14  
M3516-01 • 02/10/16 • © Hunter Fan Company

