

HUNTER - LOW PROFILE IV - CEILING FAN WIRING GUIDE

Wiring
www.HunterFan.com 1.888.830.1326

FROM CEILING

FROM FAN

FROM CEILING BRACKET

Using an orange wire connector from the ★ hardware bag, connect the 3 grounding wires (green, green/yellow stripe, or bare copper) coming from the ceiling, fan, and hanging bracket.

Note: To connect the wires, hold the bare metal leads together and place a wire connector over them, then twist clockwise until tight.

FROM CEILING

FROM FAN

Using the orange wire connectors from the ★ hardware bag, connect the black wire (ungrounded) from the ceiling to the black and the blue wires from the fan. Connect the white wire (grounded) from the ceiling to the white wire from the fan.


Turn the splices upward and push them carefully back through the hanger bracket into the outlet box. Spread the wires apart, with the grounded wires on one side of the outlet box and the ungrounded wires on the other side of the outlet box.

Refer to CAUTION c.1 on pg. 2


M0047-01 • 06/25/15 • © 2012-2015 Hunter Fan Company

HUNTER - LOW PROFILE IV - CEILING FAN WIRING GUIDE


Motor Housing www.HunterFan.com 1.888.830.1326

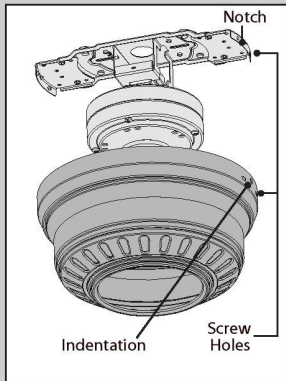

Notch
Indentation
Screw Holes

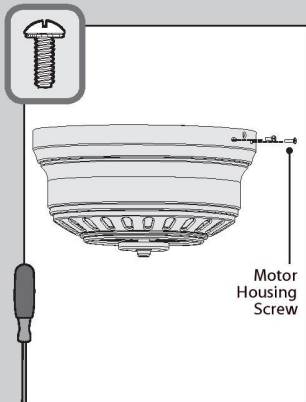

Motor Housing Screw



Raise the motor housing up over the motor and ceiling bracket. Turn the motor housing so the screw holes align and the indentation in the housing locks into place with the notch in the ceiling bracket. **The motor housing is not secured until the next step is complete. Do not leave unattended.**

With a Phillips head screwdriver, install the four motor housing screws found in the hardware bag. Tighten all four screws securely.

8

M0047-01 • 06/25/15 • © 2012-2015 Hunter Fan Company

HUNTER - LOW PROFILE IV - CEILING FAN WIRING GUIDE

Blades

www.HunterFan.com 1.888.830.1326

⊗ Insert grommets found in the ■ hardware bag into the holes in the blades, then secure each blade to a blade iron with screws found in the ▲ hardware bag.

⊗ Lightly attach the blade irons to the motor with screws found in the ⊗ hardware bag, then securely tighten after both screws are attached.

9

M0047-01 • 06/25/15 • © 2012-2015 Hunter Fan Company

HUNTER - LOW PROFILE IV - CEILING FAN WIRING GUIDE

Switch Housing
www.HunterFan.com 1.888.830.1326

⊗ Screw two housing assembly screws from the hardware bag halfway into the motor housing. It does not matter which two screw holes you choose.

⊗ Feed the wire plug through the center hole of the upper switch housing, then wrap keyhole slots around the screws and twist counterclockwise.

⊗ Insert the third screw, found in the hardware bag, into place and then tighten all three screws.

10

Make sure the upper switch housing is securely attached to the mounting plate. Failure to properly secure all 3 assembly screws could result in the switch housing fixture falling.

M0047-01 • 06/25/15 • © 2012-2015 Hunter Fan Company