



HUNTER - LOW PROFILE - CEILING FAN WIRING GUIDE

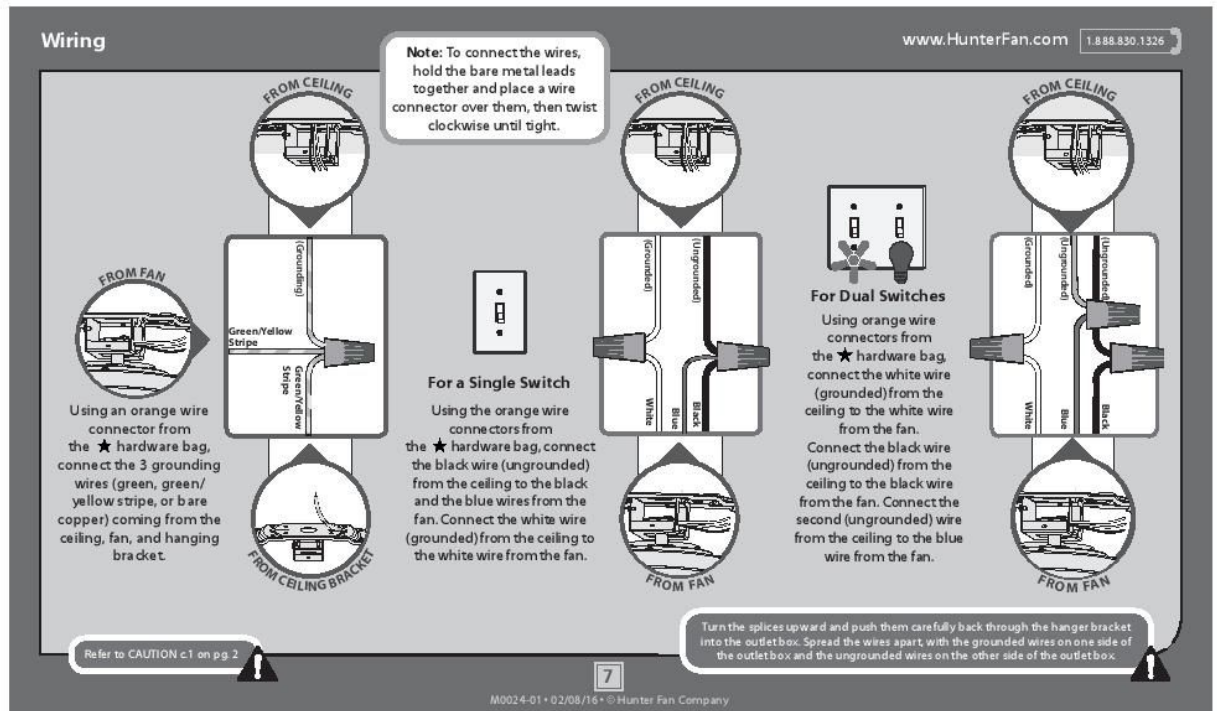


HUNTER - LOW PROFILE - CEILING FAN WIRING GUIDE


Motor Housing
www.HunterFan.com 1.888.830.1326

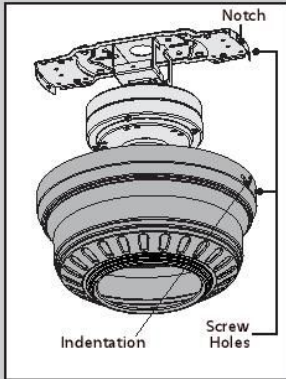

Raise the motor housing up over the motor and ceiling bracket. Turn the motor housing so the screw holes align and the indentation in the housing locks into place with the notch in the ceiling bracket. The motor housing is not secured until the next step is complete. Do not leave unattended.

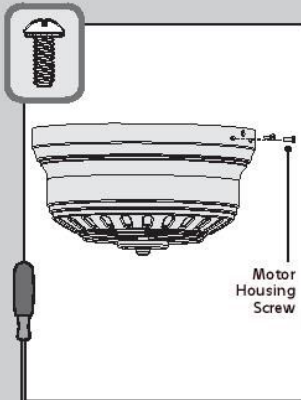


With a Phillips head screwdriver, install the four motor housing screws found in the ● hardware bag. Tighten all four screws securely.



8
M0024-01 • 02/08/16 • © Hunter Fan Company

HUNTER - LOW PROFILE - CEILING FAN WIRING GUIDE

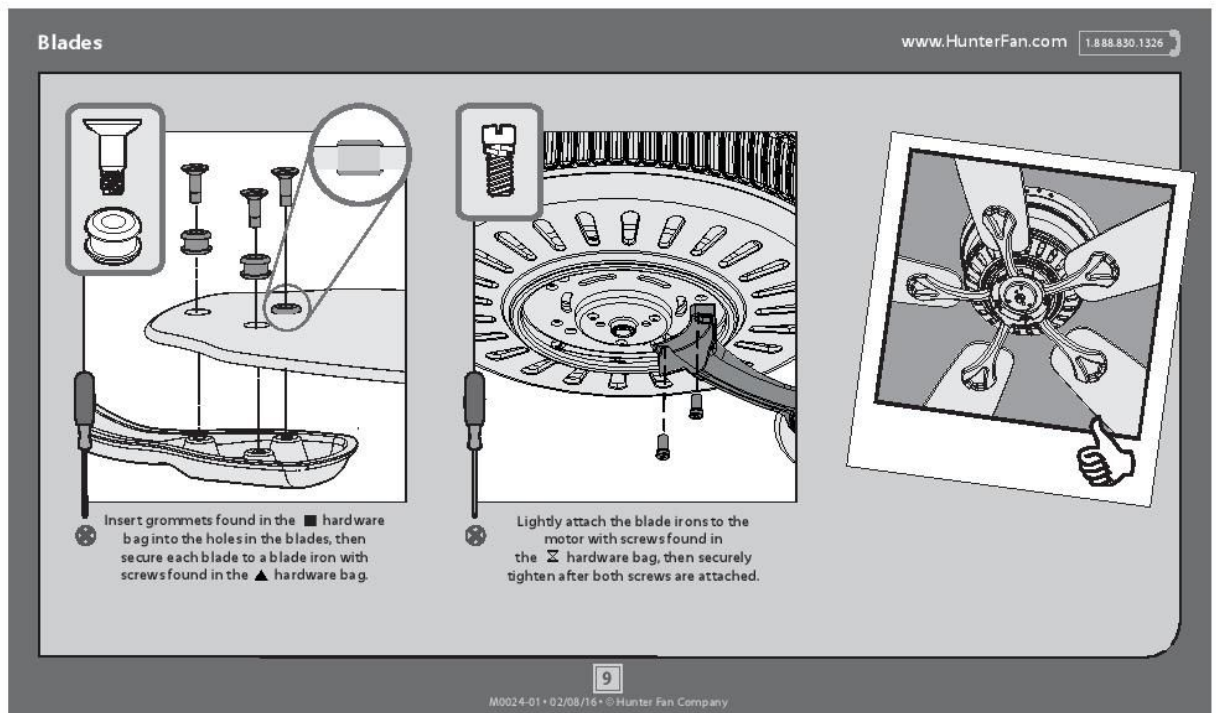





HUNTER - LOW PROFILE - CEILING FAN WIRING GUIDE

Switch Housing


www.HunterFan.com 1.888.830.1326

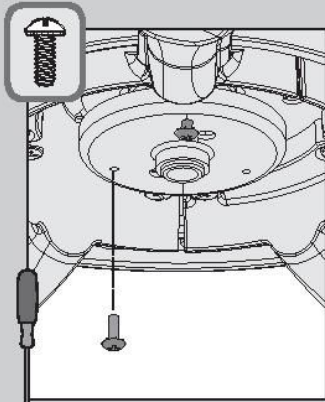

✳ Screw two (2) housing assembly screws from the ■ hardware bag halfway into the motor housing. It does not matter which two screw holes you choose.

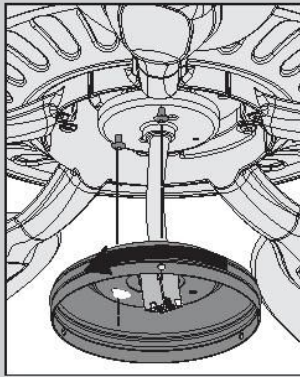

Feed the wire plug through the center hole of the upper switch housing, then wrap keyhole slots around the screws and twist counterclockwise.

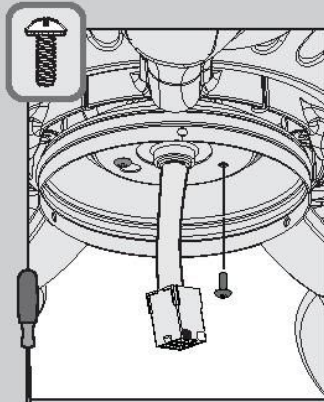

✳ Insert the third screw, found in the ■ hardware bag, into place and then tighten all three (3) screws.

Make sure the upper switch housing is securely attached to the mounting plate. Failure to properly secure all three assembly screws could result in the switch housing fixture falling.

10

M0024-01 • 02/08/16 • © Hunter Fan Company



#2 Chootoo Road, South Aranguez, San Juan, Trinidad





HUNTER - LOW PROFILE - CEILING FAN WIRING GUIDE

Light Kit

www.HunterFan.com 1.888.830.1326

Switch Housing Screw

Partially install two of the switch housing screws found in the bag. Connect the plugs from the upper and lower switch housings. Make sure to line up the colored markings on the connectors.

Notch

Switch Housing Screw

Align the notches in the sides of the lower switch housing with the upper switch housing screws. Lift the lower switch housing. Twist the lower switch housing clockwise to lock into place. Then thread the fan pull chain through the hole in the light kit.

Install the third switch housing screw. Tighten all three screws securely.

Make sure the lower switch housing is securely attached to the upper switch housing. Failure to properly secure all three assembly screws could result in the light fixture falling.

Want to install your fan without a light kit?
Go to www.HunterFan.com/FAQs and click "How do I install my fan without the light kit?"

11

M0024-01 • 02/08/16 • © Hunter Fan Company




#2 Chootoo Road, South Aranguez, San Juan, Trinidad




HUNTER - LOW PROFILE - CEILING FAN WIRING GUIDE

Light Kit (continued)


www.HunterFan.com 1.888.830.1326

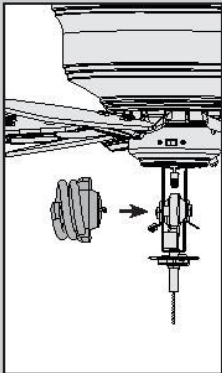


Install a bulb into each of the sockets. When necessary, replace with bulbs of the same wattage

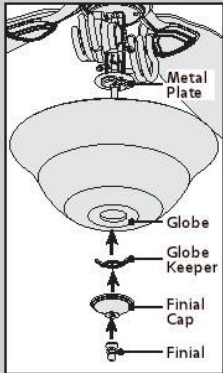

Press the globe and globe keeper flush against the metal plate. Thread the light pull chain through the hole in the center of the finial cap and thread the fan pull chain through the hole in the side of the cap. Finally, thread only the light pull chain through the hole in the finial and screw the finial onto the threaded rod.

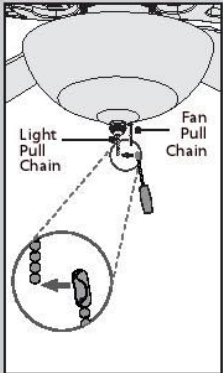

Connect the appropriate pull chain pendant to each of the short chains coming from the finial and finial cap. The fan pull chain controls the speed: from high to off. The light pull chain controls the light fixture: on and off.



See next page for fan operation instructions.

Note: Glass shade style and number of lights may vary.

12

M0024-01 • 02/08/16 • © Hunter Fan Company