



## HUNTER - DEMPSEY - CEILING FAN ACCESSORIES GUIDE

**Remote Control**www.HunterFan.com 1.888.830.1326

Battery Door

Phillips Head Screw

To access the battery compartment, remove the small Phillips head screw that secures the battery door to the transmitter assembly. The battery should be installed with the positive (+) side up. Replace with a CR2032 battery when necessary.

Switch Cover Plate

Removed Tabs

Rocker-Style Plate

To install the transmitter cradle, remove the two screws holding the switch cover plate. Do not remove the cover plate. Orient the cradle by lining up the two mounting holes with those on the cover plate. Insert and tighten the screws. Do not over tighten.

**Note:** For rocker-style cover plates, break off the tabs by pushing outward.

Turn Power ON

CONGRATULATIONS! YOU'RE DONE!

See next page for fan operation instructions. ➔

16

M0114-01 • 02/10/16 • © 2016 Hunter Fan Company



#2 Chootoo Road, South Aranguez, San Juan, Trinidad

