 





HUNTER - DEMPSEY - CEILING FAN MAINTENANCE GUIDE

Operation, Maintenance, & Cleaning

www.HunterFan.com 1.888.830.1326

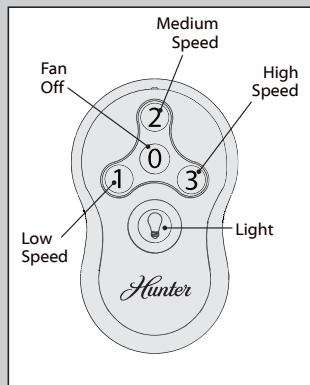


 To turn on fan, press a fan speed button. Speeds range from off (0) to high (3). Quickly press the Light button to turn the lights off and on. Hold the Light button to raise and dim the light level.

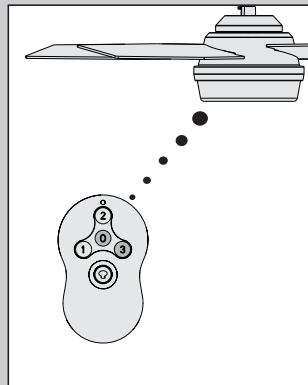

The remote transmitter should already be paired to the receiver and ready to use.

 Note: If your need to pair your remote, turn fan power off and back on at the wall switch. Within 3 minutes, press and hold both the Fan Off button and the High button for 4 seconds to pair the remote. **To prevent faulty operation, please ensure all other ceiling fans within range are turned off at the wall switch while pairing.**

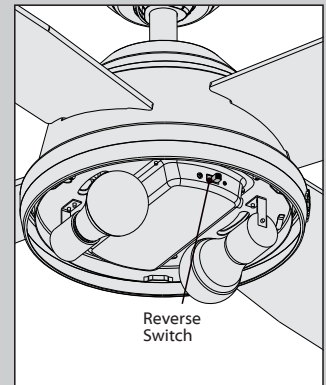

To switch the direction of air flow, move the reverse switch to the opposite position. You will need to remove the glass to do so.



M0114-01 • 02/10/16 • © 2016 Hunter Fan Company



#2 Chootoo Road, South Aranguez, San Juan, Trinidad

 





HUNTER - DEMPSEY - CEILING FAN MAINTENANCE GUIDE

Operation, Maintenance, & Cleaning (continued)

www.HunterFan.com 1.888.830.1326

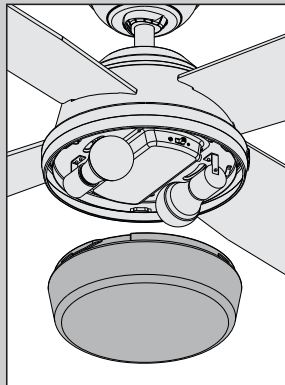

 Changing the bulbs - carefully remove the globe. Unscrew bulbs and replace with bulbs of the same wattage. Reinstall the globe.

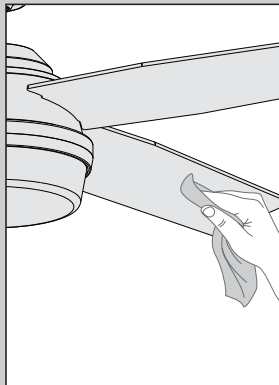

When cleaning the fan, use soft brushes or cloths to prevent scratching. Cleaning products may damage the finishes.

Safe-Exit

The Safe-Exit Program gives you about thirty seconds of light when you turn the lights off to exit the room before the lights go out. To use Safe-Exit:

- Press the Fan Off button for at least three seconds to initiate the Safe-Exit Mode.
- The lights will flash for visual confirmation.
- The lights will stay on 50% brightness for 15 seconds and then begin to dim. After a total of 30 seconds, the lights will be completely off.

18

M0114-01 • 02/10/16 • © 2016 Hunter Fan Company



#2 Chootoo Road, South Aranguez, San Juan, Trinidad





HUNTER - DEMPSEY - CEILING FAN MAINTENANCE GUIDE

Troubleshootingwww.HunterFan.com 1.888.830.1326

Fan doesn't work <ul style="list-style-type: none">• Make sure power switch is on.• Pull the pull chain to make sure it is on.• Push the motor reversing switch firmly left or right to ensure that it is engaged.• Check the circuit breaker to ensure the power is turned on.• Make sure the blades spin freely.• Turn off power from the circuit breaker, then loosen the canopy and check all the connections according to the wiring diagram on pages 9-10.• Check the plug connection in the switch housing.	Excessive wobbling <ul style="list-style-type: none">• Tighten all of the blade and blade iron screws until they are snug.• Turn the power off, support the fan carefully, and check that the hanger ball is properly seated.• Use the provided balancing kit and instructions to balance the fan.	Noisy operation <ul style="list-style-type: none">• Tighten the blade and blade iron screws until they are snug.• Check to see if any of the blades are cracked. If so, replace all of the blades.	Lights dim when turned on or do not turn on at all. <ul style="list-style-type: none">• Make sure the wattage of the light bulbs installed matches the specifications on the light sockets.
	Remote control of fan is erratic <ul style="list-style-type: none">• Make sure the battery is installed correctly.• Install a fresh battery. Transmitter only works when held at close range <ul style="list-style-type: none">• Change battery.	If you have multiple remotes or multiple remote-controlled fans installed on the same circuit breaker and you are experiencing interference or faulty operation of your remote controls, please go to www.HunterFan.com/FAQs and click "How do I properly install multiple remote-controlled fans?" for information on how to correct this issue.	

19
M0114-01 • 02/10/16 • © 2016 Hunter Fan Company

