


HUNTER - DEMPSEY - CEILING FAN WIRING GUIDE

Wiring


www.HunterFan.com 1.888.830.1326

Note: To connect the wires, hold the bare metal leads together and place a wire connector over them, then twist clockwise until tight.

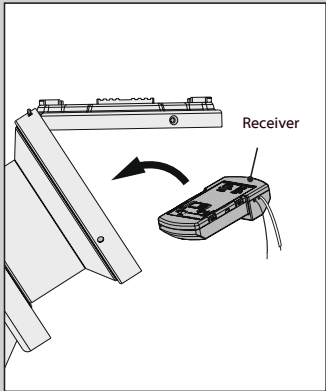

Receiver

Place the receiver inside the canopy

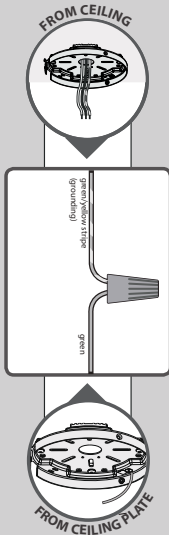

FROM CEILING

FROM CEILING PLATE

Using an orange wire connector from the ★ hardware bag, connect the 3 grounding wires (green, green/yellow stripe, or bare copper) coming from the ceiling and ceiling plate.

Refer to CAUTION c.1 on pg. 2

8

Turn the splices upward and push them carefully back through the hanger bracket into the outlet box. Spread the wires apart, with the grounded wires on one side of the outlet box and the ungrounded wires on the other side of the outlet box.

M0117-01 • 02/12/16 • © 2016 Hunter Fan Company



HUNTER - DEMPSEY - CEILING FAN WIRING GUIDE

www.HunterFan.com 1.888.830.1326

Using the orange wire connectors from the remote control hardware bag:

- Connect the yellow wire from the receiver to the black wire from the fan.
- Connect the blue wire from the receiver to the blue wire (or possibly black with white stripe wire) from the fan.

Using the orange wire connectors from the ★ hardware bag:

- Connect the black (ungrounded) wire from the ceiling to the black wire from the receiver.
- Connect the white (grounded) wire from the ceiling to both the white wire from the receiver and the white wire from the fan.

Refer to CAUTION c.1 on pg. 2

Turn the splices upward and push them carefully back through the hanger bracket into the outlet box. Spread the wires apart, with the grounded wires on one side of the outlet box and the ungrounded wires on the other side of the outlet box.


M0117-01 • 02/12/16 • © 2016 Hunter Fan Company





HUNTER - DEMPSEY - CEILING FAN WIRING GUIDE


Canopy www.HunterFan.com 1.888.830.1326

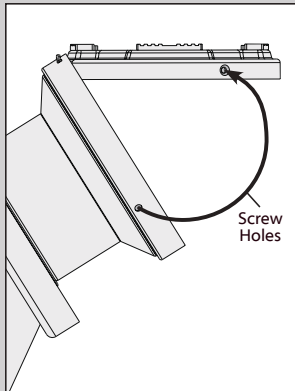

Screw Holes


Swing the fan up to align the canopy screw holes with the mounting holes on the ceiling plate.

Note: The slots in the canopy must remain engaged while swinging the canopy for alignment.

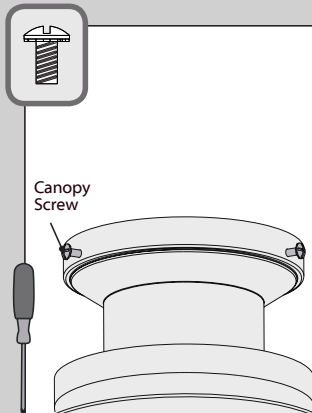

Canopy Screw

⊗ Hold the canopy up with the screw holes aligned. Partially install two canopy screws, found in the ● hardware bag, into the holes opposite the ceiling plate hooks.

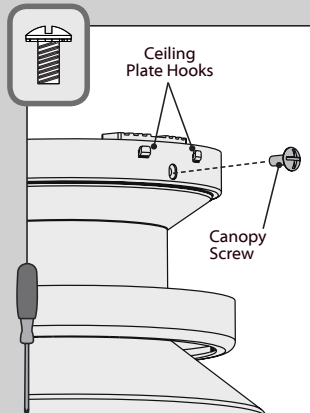

Ceiling Plate Hooks

Canopy Screw

⊗ Partially install a canopy screw, found in the ● hardware bag, between the ceiling plate hooks. When all the holes are properly aligned, securely tighten all three canopy screws.



10

M0117-01 • 02/12/16 • © 2016 Hunter Fan Company



HUNTER - DEMPSEY - CEILING FAN WIRING GUIDE

Canopy (continued) www.HunterFan.com 1.888.830.1326

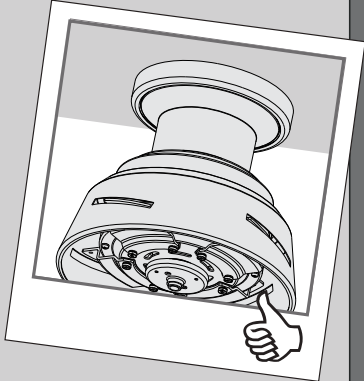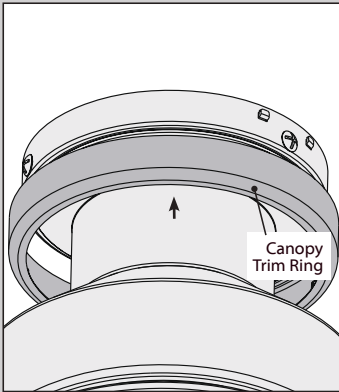

Using both hands, push the canopy trim ring up to the top of the canopy. The canopy trim ring will snap and lock into place.


Note: Should you need to remove the trim ring, press firmly on opposite sides of the trim ring. The tabs will flex out releasing the canopy trim ring.

11

M0117-01 • 02/12/16 • © 2016 Hunter Fan Company

HUNTER - DEMPSEY - CEILING FAN WIRING GUIDE

Blades www.HunterFan.com 1.888.830.1326

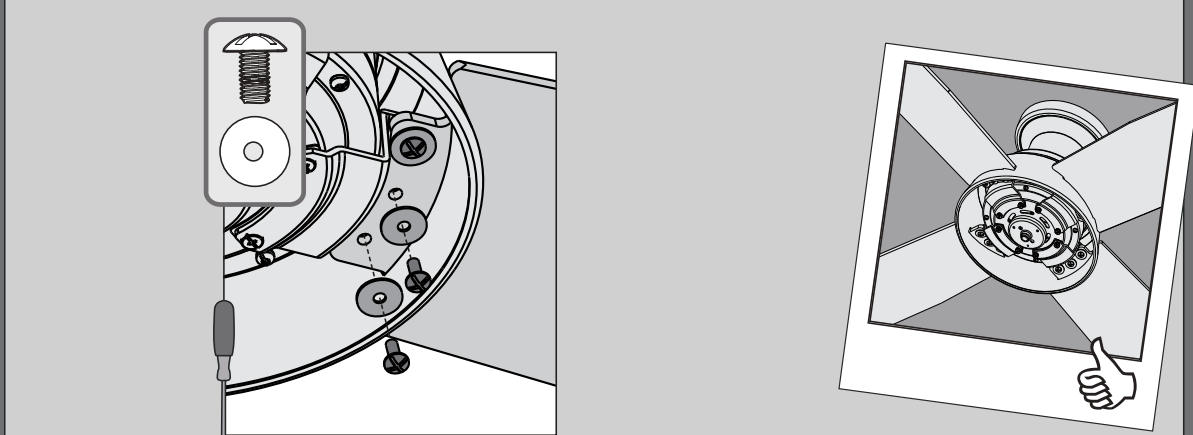

⊗ Attach each blade to a blade iron using three blade washers, found in the ■ hardware bag, and three blade assembly screws, found in the ▲ hardware bag.

12
M0117-01 • 02/12/16 • © 2016 Hunter Fan Company

HUNTER - DEMPSEY - CEILING FAN WIRING GUIDE

Switch Housing
www.HunterFan.com 1.888.830.1326

⊗ Screw two housing assembly screws from the hardware bag halfway into the motor housing. It does not matter which two screw holes you choose.

Feed the wire plug through the center hole of the upper switch housing, then wrap keyhole slots around the screws and twist counterclockwise.

⊗ Insert the third screw, found in the hardware bag, into place and then tighten all three screws.


Make sure the upper switch housing is securely attached to the mounting plate. Failure to properly secure all 3 assembly screws could result in the switch housing fixture falling.

13
M0117-01 • 02/12/16 • © 2016 Hunter Fan Company




HUNTER - DEMPSEY - CEILING FAN WIRING GUIDE


Switch Housing (continued) www.HunterFan.com 1.888.830.1326

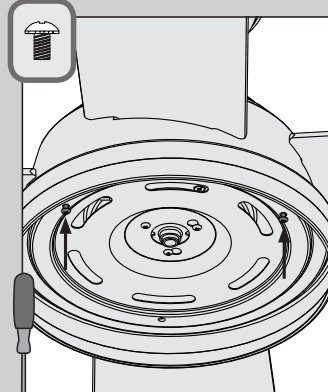


⊗ Screw two housing assembly screws from the hardware bag halfway into the upper switch housing. It does not matter which two screw holes you choose.

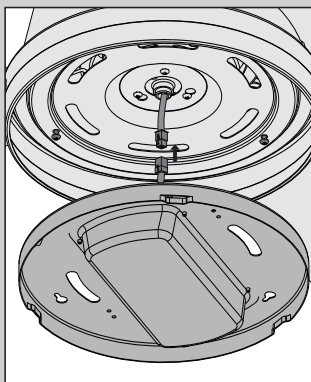

Connect the plugs from the upper and lower switch housings. Make sure to line up the colored markings on the connectors. Wrap light kit keyhole slots around the screws and twist counterclockwise.

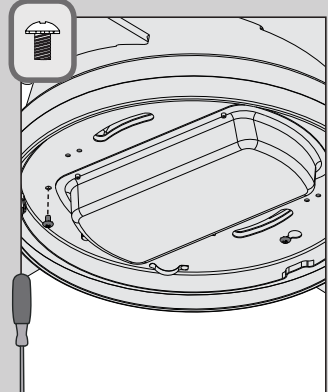

⊗ Install the third switch housing screw. Tighten all three screws securely.


Make sure the lower switch housing is securely attached to the upper switch housing. Failure to properly secure all three assembly screws could result in the light fixture falling. 

14
M0117-01 • 02/12/16 • © 2016 Hunter Fan Company



HUNTER - DEMPSEY - CEILING FAN WIRING GUIDE

Switch Housing (continued) www.HunterFan.com 1.888.830.1326

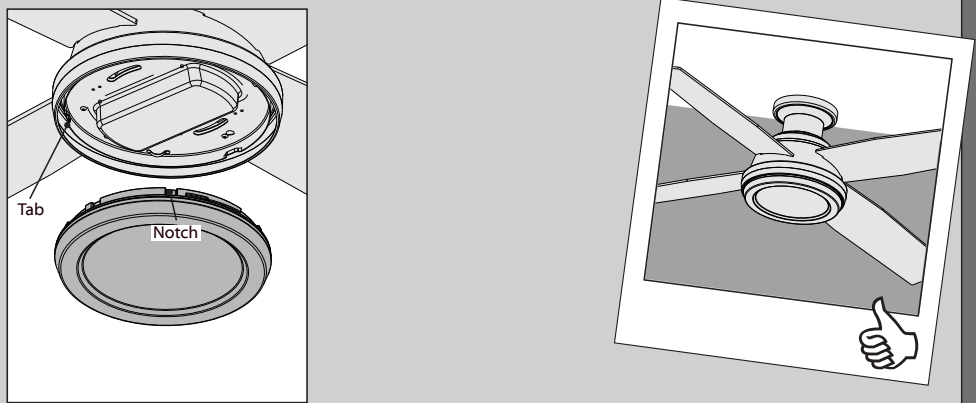

Lift the switch housing cap and align the notches in the globe with the tabs in the switch housing. Attach the cap to the switch housing kit by twisting it clockwise until it snaps into place.

15

M0117-01 • 02/12/16 • © 2016 Hunter Fan Company