




HUNTER - DEMPSEY - CEILING FAN WIRING AND LIGHTING GUIDE

Wiring


www.HunterFan.com 1.888.830.1326

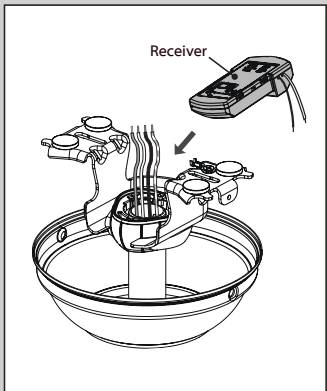

Place the receiver on top of the downrod assembly as shown.

Note: To connect the wires, hold the bare metal leads together and place a wire connector over them, then twist clockwise until tight.

Using an orange wire connector from the ★ hardware bag:
Connect the 3 grounding wires (green, green/yellow stripe, or bare copper) coming from the ceiling, downrod, and ceiling bracket.

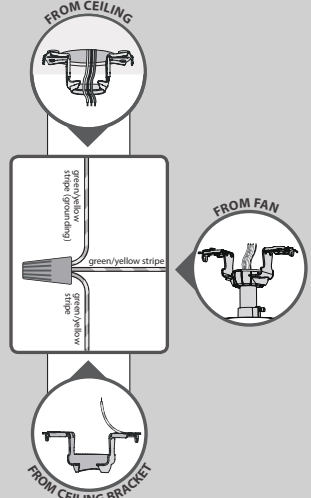

Turn the splices upward and push them carefully back through the hanger bracket into the outlet box. Spread the wires apart, with the grounded wires on one side of the outlet box and the ungrounded wires on the other side of the outlet box.


Refer to CAUTION c.1 on pg. 2

9

M0114-01 • 02/10/16 • © 2016 Hunter Fan Company



HUNTER - DEMPSEY - CEILING FAN WIRING AND LIGHTING GUIDE

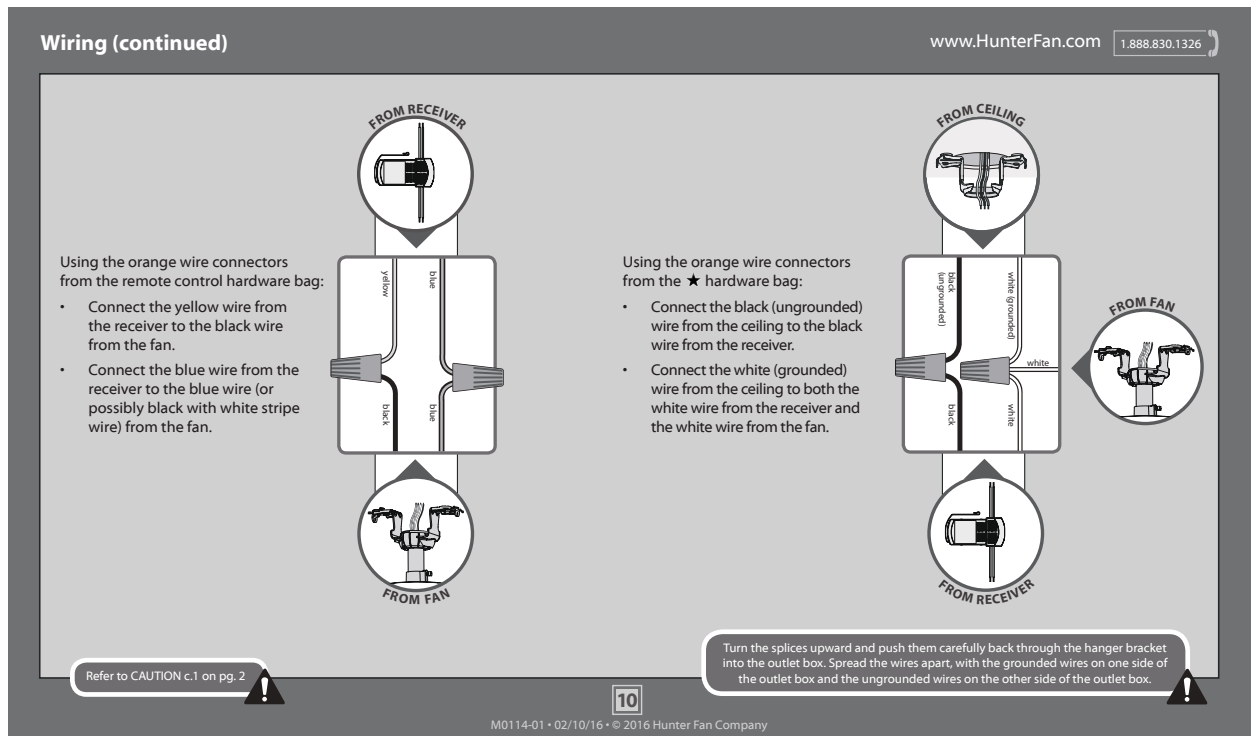

#2 Chootoo Road, South Aranguez, San Juan, Trinidad





HUNTER - DEMPSEY - CEILING FAN WIRING AND LIGHTING GUIDE

Canopy

www.HunterFan.com 1.888.830.1326

Position the canopy so that, when lifted into place, the canopy fits into the hanging bracket as shown.

Lift the canopy into place so that the screw holes are aligned.

Insert the two canopy screws found in the hardware bag.

Note: Fan style may vary.

11

M0114-01 • 02/10/16 • © 2016 Hunter Fan Company




#2 Chootoo Road, South Aranguez, San Juan, Trinidad




HUNTER - DEMPSEY - CEILING FAN WIRING AND LIGHTING GUIDE


Switch Housing www.HunterFan.com 1.888.830.1326

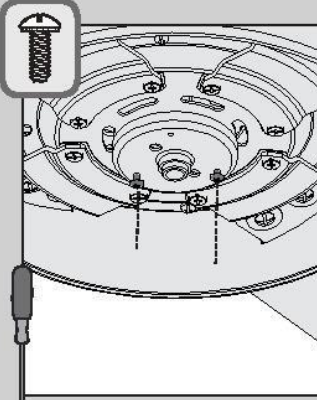

Screw two housing assembly screws from the hardware bag halfway into the motor housing. It does not matter which two screw holes you choose.

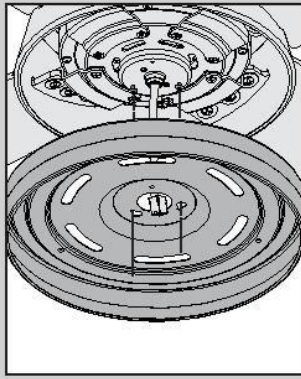

Feed the wire plug through the center hole of the upper switch housing, then wrap keyhole slots around the screws and twist counterclockwise.

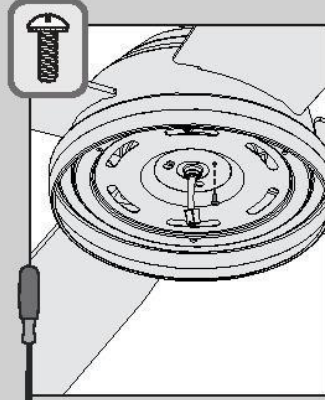

Insert the third screw, found in the hardware bag, into place and then tighten all three screws.


Make sure the upper switch housing is securely attached to the mounting plate. Failure to properly secure all 3 assembly screws could result in the switch housing fixture falling.

13

M0114-01 • 02/10/16 • © 2016 Hunter Fan Company



HUNTER - DEMPSEY - CEILING FAN WIRING AND LIGHTING GUIDE

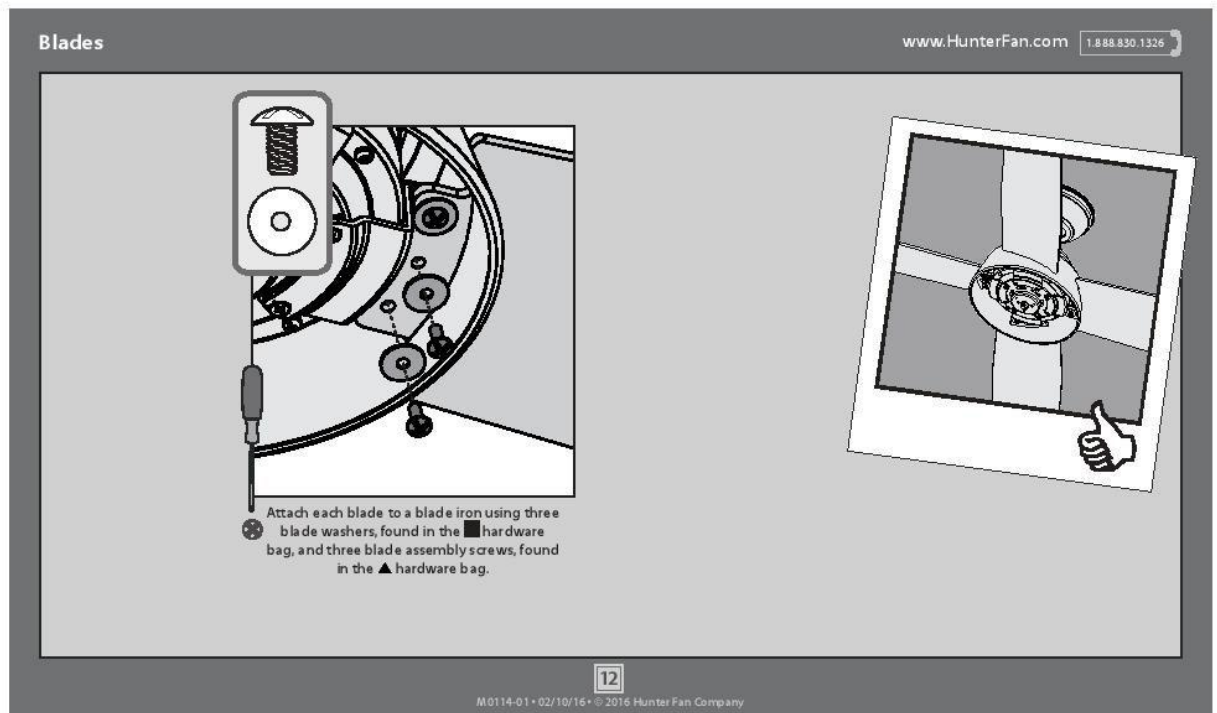


#2 Chootoo Road, South Aranguez, San Juan, Trinidad






HUNTER - DEMPSEY - CEILING FAN WIRING AND LIGHTING GUIDE


Light Kit www.HunterFan.com 1.888.830.1326

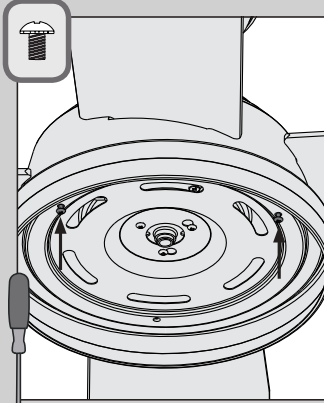

⊗ Screw two housing assembly screws from the hardware bag halfway into the upper switch housing. It does not matter which two screw holes you choose.

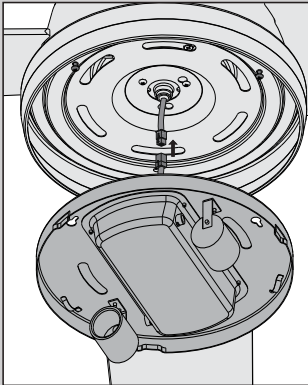

Connect the plugs from the upper and lower switch housings. Make sure to line up the colored markings on the connectors. Wrap light kit keyhole slots around the screws and twist counterclockwise.

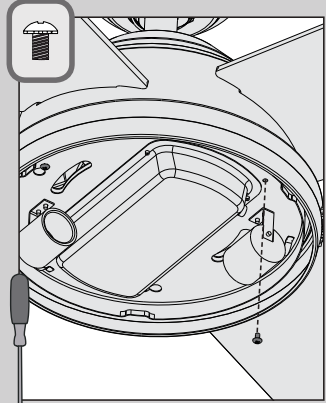

⊗ Install the third switch housing screw. Tighten all three screws securely.

Make sure the lower switch housing is securely attached to the upper switch housing. Failure to properly secure all three assembly screws could result in the light fixture falling.

14

M0114-01 • 02/10/16 • © 2016 Hunter Fan Company



#2 Chootoo Road, South Aranguez, San Juan, Trinidad







HUNTER - DEMPSEY - CEILING FAN WIRING AND LIGHTING GUIDE

Light Kit (continued)


www.HunterFan.com 1.888.830.1326

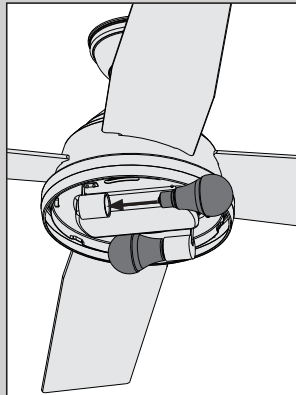

Install a bulb into each of the sockets.
When necessary, replace with bulbs of the
same type and wattage.

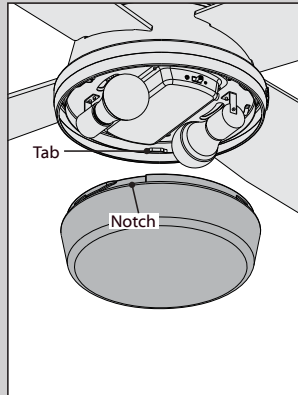

Lift the globe and align the notches in the
globe with the tabs in the light kit. Attach
the glass bowl to the light kit by twisting it
clockwise until it snaps into place.

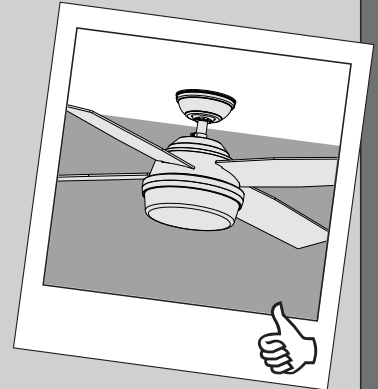

15

M0114-01 • 02/10/16 • © 2016 Hunter Fan Company



#2 Chootoo Road, South Aranguéz, San Juan, Trinidad

