

## **CANARM - RYLAND - PENDANT LIGHTING INSTALLATION GUIDE**

# PENDANT LIGHT

1-800-265-1833 (English) / 1-800-567-2513 (French) Monday through Friday 8:00 AM to 5:00 PM E.S.T.


IPL411B03XX12 IPL411B05XX22 09/16



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS READ ALL INSTRUCTIONS

## **IMPORTANT SAFETY INSTRUCTIONS** SAVE THESE INSTRUCTIONS

### TOOLS AND MATERIALS REQUIRED:




#### **SAFETY PRECAUTIONS:**


- 1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
- 2.THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- 3. CONNECT THE GROUND WIRES (BARE COPPER OR GREEN) FROM YOUR FIXTURE TO THE GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL BOX.
- 4. TO CLEAN THE FIXTURE, TURN OFF THE POWER, WAIT FOR IT TO COOL, AND WIPE THE FIXTURE WITH A CLEAN, SOFT CLOTH.


NOTE: Product may not look exactly as shown in figures.

#### **INSTALLATION:**

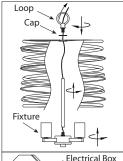


 $\mathbb{1}_{\circ}$  Screw the centre rod to the fixture.




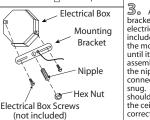


 $\mathfrak{Z}_{\circ}$  Attach the mounting bracket to the electrical box using electrical box screws (not included). Attach the nipple to the mounting bracket and adjust until it will clear the canopy when assembled (Place the canopy over dssembled (rate the campy over the nipple and tighten the upper connector onto the nipple until snug. The upper connector should hold the canopy snug to the ceiling). Lock the nipple in the correct position using the hex nut.




 $5_{\circ}$  Loosen the nut on the upper connector and slide it down the chain towards the lower connector. Slide the canopy down the chain towards the lower connector. Feed the wire through nut, canopy, the upper connector and onto the nipple. Tighten the upper connector onto the nipple. Spread the other end the nipple. Spread the other end of the chain open and fasten to the upper connector. Ensure the opening is closed.

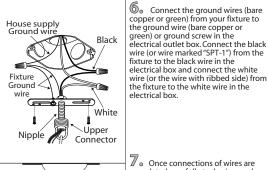

Once connections of wires are completed, carefully tuck wires and wire nuts into the electrical box making sure no bare wire (on the black and white) is visible at the wire nuts. Slide canopy into position and tighten in place by nut into position.



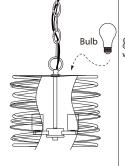

🗞 Install specified bulb type and wattage (not included).

